

BD1-28 INSTRUCTIONS FOR USE


Thank you for having chosen an LAE electronic product. Before installing the instrument, please read this instruction booklet carefully in order to ensure safe installation and optimum performance.

1. INSTALLATION

- The BD1-28 controller, size 107x95x47 mm (WxHxD), is to be secured to a DIN rail in such a position as to ensure that no liquid infiltrates causing serious damage and compromising safety.
- Make sure that electrical connections comply with the paragraph "wiring diagrams". To reduce the effects of electromagnetic disturbance, keep the sensor and signal cables well separate from the power wires.
- Place the probe T1 inside the room in a point that truly represents the temperature of the stored product.
- Place the probe T2 on the evaporator where there is the maximum formation of frost.
- The function of probe T3 is determined by the parameter T3. With T3=DSF the probe measures the temperature to be displayed. With T3=CND the probe measures the condenser temperature, it must therefore be placed between the fins of the condensing unit. With T3=EU the probe measures the temperature of the second evaporator and it must therefore be placed where there is the maximum formation of frost. With T3=NON, the third probe is disabled.

2. DISPLAY INFO


Alarm		Room high temperature alarm
Thermostat output		Room low temperature alarm
Fan output		Condenser high temperature
Defrost output		Generic alarm
Activation of 2nd set		Condenser clean warning
Controller in stand-by		Probe T1 failure
Defrost in progress		Probe T2 failure
Door open alarm		Probe T3 failure

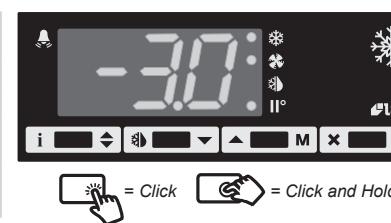

In case of alarm, press any key to mute the buzzer sound.

Info items	Navigation
t1 Instant probe 1 temperature	Display value
t2* Instant probe 2 temperature	Next
t3* Instant probe 3 temperature	Previous
th Max probe 1 temperature	Exit
tl Min probe 1 temperature	
cnd** Compressor working weeks	
loc Keypad state lock	
*: only if enabled **: only if ACC > 0	

3. OPERATION

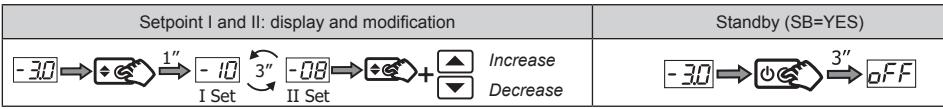

3.1 SELECTION OF SECOND PARAMETER GROUP

Manual (IISM=MAN)	Automatic (IISM=ECO)	Contact (IISM=DI)
3"	ECO (See Fig. 3)	DxA=CLS DxA=OPN

3.2 DEFROST START

Manual	Timed (DFM=TIM)	Optimized (DFM=FRO)	Remote (DxO=RDS)
2"	DFT hours	T2 < 0°C for DFT hours	DxO=CLS DxO=OPN
Synchronized (D3O=DSY)			
		Start and end are synchronized among connected BD1-28	


3.3 DEFROST TERMINATION

Time limit	Survey of 1 evaporator before time limit	Survey of 2 evaporators before time limit
DTO minutes	DTO minutes or T2 ≥ DLI	DTO minutes or T2 and T3 ≥ DLI


Resuming thermostatic cycle. When defrost is over, if DRN is greater than 0, all outputs will remain off for DRN minutes, in order for the ice to melt completely and the resulting water to drain. Moreover, if probe T2 is active (T2=YES), the fans will re-start when the evaporator gets to a temperature lower than FDD. Vice versa, if probe T2 is not active (T2=NO) or after defrost has come to an end, such condition does not occur by end of the time FTO, after FTO minutes have elapsed the fans will be switched on anyway.

Caution: If DFM=NON or C-H=HEA all defrost functions are inhibited; if DFT=0, automatic defrost functions are excluded. During defrost, high temperature alarm is bypassed.

4. CONFIGURATION PARAMETERS

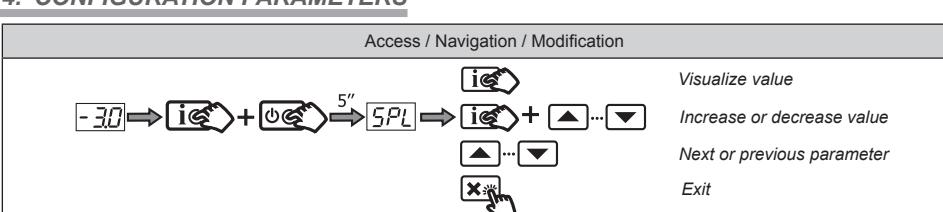

PAR	RANGE	DESCRIPTION
SPL	-50...SPH	Minimum limit for SP setting.
SPH	SPH...110°	Maximum limit for SP setting.
SP	SP...SPH	Setpoint (value to be maintained in the room).
C-H	REF; HEA	Refrigerating (REF) or Heating (HEA) control mode.
HY0	1...10°	Thermostat OFF -> ON differential.
HY1	0...10°	Thermostat ON -> OFF differential.
CRT	0...30min	Compressor rest time. The output is switched on again after CRT minutes have elapsed since the previous switchover. We recommend to set CRT=03 with HY0<2.0°.
CT1	0...30min	Compressor/Heater output run when probe T1 is faulty. With CT1=0 the output will always remain OFF.

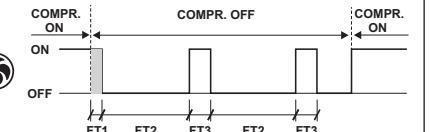CT2	0...30min	Compressor/Heater output stop when probe T1 is faulty. With CT2=0 and CT1>0 the output will always be ON. Example: CT1=4, CT2= 6. In case of probe T1 failure, the compressor will cycle 4 minutes ON and 6 minutes OFF.
DFM	NON; TIM; FRO	Defrost start mode NON : defrost function is disabled (the following parameter will be FCM). TIM : regular time defrost. FRO : the defrost time count is only increased when the conditions occur for frost to form on the evaporator (optimised time increase). If the evaporator works at 0°C, defrost frequency depends on the thermal load and climatic conditions. With setpoints much lower than 0°C, defrost frequency mainly depends on the refrigerator operating time.
DFT	0...99 hours	Time interval among defrosts. When this time has elapsed since the last defrost, a new defrost cycle is started. For example, with DFM=TIM and DFT=06 , a defrost will take place every 6 hours.
DFB	NO/YES	Defrost timer backup. With DFB=YES , after a power interruption, the timer resumes the count from where it was left off with ±30 min. approximation. With DFB=NO , after a power interruption, the defrost timer will re-start to count from zero.
DLI	-50...110°	Defrost end temperature.
DTO	1...120min	Maximum defrost duration.
DTY	OFF; ELE; GAS	Defrost type. OFF : off cycle defrost (Compressor and Heater OFF). ELE : electric defrost (Compressor OFF and Heater ON). GAS : hot gas defrost (Compressor and Heater ON).
DSO	OFF; LO; HI	Defrost start - thermostat cycle synchronization OFF : none. The defrost will occur without delay. LO : defrost start will be postponed to compressor cut-out (SOD = max delay). HI : defrost start will be postponed to compressor cut-in (SOD = max delay).
SOD	0...30 min	Timeout for defrost start - thermostat cycle synchronization. If 0, defrost will start immediately.
DPD	0...240sec	Evaporator pump down. At the beginning of defrost, defrost outputs (determined by DTY) are OFF for DPD seconds.
DRN	0...30min	Pause after defrost (evaporator drain down time).
DDM	RT; LT; SP; DEF	Defrost display mode. During defrost the display will show: RT : the real temperature; LT : the last temperature before defrost; SP : the current setpoint value; DEF : "dDEF".
DDY	0...60min	Display delay. The display shows the information selected with parameter DDM during defrost and for DDY minutes after defrost termination.
FID	NO/YES	Fans active during defrost.
FDD	-50...110°	Evaporator fan re-start temperature after defrost.
FTO	0...120min	Maximum evaporator fan stop after defrost.
FCM	NON; TMP; TIM	Fan mode during thermostatic control. NON : The fans remain ON all the time; TMP : Temperature-based control. The fans are ON when the compressor is ON. When the compressor is turned OFF, the fans remain ON as long as the temperature difference Te-Ta is greater than FDT. The fans are turned ON again with FDH differential. (Te = Evaporator temperature, Ta = Air temperature); TIM : Timed-based control. The fans are ON when the compressor is ON. When the compressor is OFF, the fans switch ON and OFF according to parameters FT1, FT2, FT3 (See Fig.2).  Fig.2 Time-optimised fan control (FCM=TIM)
FDT	-12...0°	Evaporator-Air temperature difference for the fans to turn OFF after the compressor has stopped.
FDH	1...12°	Temperature differential for fan re-start. Example: FDT = -1, FDH=3. In this case, after the compressor has stopped, the fans are OFF when Te > Ta - 1 (FDT), whereas the fans are ON when Te < Ta - 4 (FDT-FDH).
FT1	0...180sec	Fan stop delay after compressor/heater stop.
FT2	0...30min	Timed fan stop. With FT2=0 the fans remain on all the time.
FT3	0...30min	Timed fan run. With FT3=0, and FT2 > 0, the fans remain off all the time.
ATM	NON; ABS; REL	Alarm threshold management. NON : all temperature alarms are inhibited (the following parameter will be ACC). ABS : the values programmed in ALA and AHA represent the real alarm thresholds. REL : the alarm threshold is obtained by the sum of setpoint, thermostat differential and ALR/AHR.
ALA	-50...110°	Low temperature alarm threshold.
AHA	-50...110°	High temperature alarm threshold.
ALR	-12...0°	Low temperature alarm differential. With ALR=0 the low temperature alarm is excluded.
AHR	0...12°	High temperature alarm differential. With AHR=0 the high temperature alarm is excluded.
ATI	T1; T2; T3	Probe used for temperature alarm detection.
ATD	0...120min	Delay before alarm temperature warning.
ACC	0...52 weeks	Condenser periodical cleaning. When the compressor operation time, expressed in weeks, matches the ACC value programmed, "CL" flashes in the display. With ACC=0 the condenser cleaning warning is disabled and CND disappears from Info Menu.
IISM	NON; MAN; ECO; DI	Switchover mode to second parameter set NON : inhibition to use the second parameter group (the following parameter will be SB). MAN : button [M] switches the two parameter groups over. ECO : automatic switchover to the second parameter group, when ECO conditions are detected. DI : switchover to the second parameter group when Dlx input is on.
IISL	-50...IIH0	Minimum limit for IISL setting.
IIH0	SP+HY0	SP+HY0
IIH1	SP+HY1	SP+HY1
IIISL	SP...IIH0	SP...IIH0
IIISP	SP...IIH1	SP...IIH1
IIIDF	0...99 hours	Time interval among defrosts in mode 2.
IIFC	NON; TMP; TIM	Fan control in mode 2. See FCM.
ECS	1...5	Controller sensitivity for the automatic switchover from Group I to Group II (1=minimum, 5=maximum).
EPT	0...240 min	Eco pull-down time. Only with IISM=ECO. Group I parameters are used in regulation for at least EPT minutes. See Fig.3
SB	NO/YES	Stand-by button [B] enabling.
DSM	NON; ALR; STP	Door switch input mode: NON : door switch inhibited ALR : when Dlx=DOR and the digital input is on, an alarm is generated after DAD minutes STP : when Dlx=DOR and the digital input is on, in addition to the alarm, the fans are immediately stopped and the compressor is stopped after CSD minutes.
DAD	0...30 min	Delay before door open alarm warning.
CSD	0...30 min NO	Compressor/heater stop delay after door has been opened. If CSD=NO compressor/heater never stops due to the door opening.

D10	NON; DOR; ALR; IISM; RDS	DI1 digital input operation NON : digital input 1 not active. DOR : door input. ALR : when the input is on, an alarm is generated (if AHM=STP, the compressor is stopped and the defrosts are suspended). IISM : when the input is on, the controller will use group II parameters. RDS : when the input is on, a defrost is started (remote control).
D1A	OPN; CLS.	DI1 digital input activation. OPN : on open CLS : on close
D20	See D1O	DI2 digital input operation. See D1O.
D2A	OPN; CLS.	DI2 digital input activation. See D1A.
D30	NON; ... RDS; DSY;	DI3 digital input operation NON ... RDS : See D1O. DSY : defrost synchronization. The controllers will all start and end defrost together. The first controller in defrost will get defrost of all the others started. The last controller ending defrost will get defrost of all the others stopped.
D3A	OPN; CLS.	DI3 digital input activation. See D1A.
LSM	NON; MAN; ECO; D1; D2; D3;	Light control mode NON : light output not controlled. MAN : light output controlled through button [M] (if OAX=LGT). ECO : lights activated/deactivated following the ECO state. D1 : lights activated/deactivated following the Dlx state.
L		

BD1-28 ISTRUZIONI D'USO


Vi ringraziamo per la preferenza accordataci scegliendo un prodotto LAE electronic. Prima di procedere all'installazione dello strumento, leggete attentamente il presente foglio d'istruzioni: solo così potrete ottenere massime prestazioni e sicurezza.

1. INSTALLAZIONE

- BD1-28 ha dimensioni 107x95x47 mm (LxHxP); va fissato ad una barra DIN in una posizione tale da garantire l'impossibilità di infiltrazioni che potrebbero causare gravi danni e compromettere la sicurezza.
- Eseguire i collegamenti elettrici facendo riferimento al paragrafo "schemi di collegamento". Per ridurre gli effetti delle perturbazioni elettromagnetiche, distanziare i cavi delle sonde e di segnale dai conduttori di potenza.
- Posizionare la sonda T1 in un punto della cella che ben rappresenta la temperatura del prodotto da conservare.
- Posizionare la sonda T2 sull'evaporatore nel punto di maggior formazione di brina.
- La funzione della sonda T3 è determinata dal parametro T3. Con T3=DSP la sonda misura la temperatura da visualizzare sul display; con T3=CND la sonda rileva la temperatura del condensatore, va quindi posizionata fra le alette dell'unità condensante; con T3=2EU la sonda misura la temperatura del secondo evaporatore e va posizionata nel punto di maggior formazione di brina; con T3=NON si disabilita l'utilizzo della terza sonda..

2. VISUALIZZAZIONE INFORMAZIONI


Allarme	h_1	Alta temperatura in cella
Uscita termostatazione	L_0	Bassa temperatura in cella
Uscita ventole	h_C	Alta temperatura condens.
Sbrinamento	R_L	Allarme generico
Attivazione 2° set	c_L	Richiesta pulizia condensatore
Strumenti in stand-by	E_1	Guasto nella sonda T1
Sbrinamento in corso	E_2	Guasto nella sonda T2
Allarme porta aperta	E_3	Guasto nella sonda T3

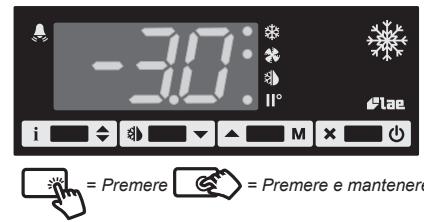

In caso di allarme, premere qualsiasi tasto per zittire il buzzer

Menù info	Navigazione
t_1 Temp. istantanea sonda 1	
t_2 * Temp. istantanea sonda 2	
t_3 * Temp. istantanea sonda 3	
t_h Temp. Max. registrata sonda 1	
t_{L0} Temp. Min. registrata sonda 1	
cnd** Settimana di funzionamento	
Stato blocco tasti	
*: solo se abilitato **: solo se ACC > 0	

3. FUNZIONAMENTO

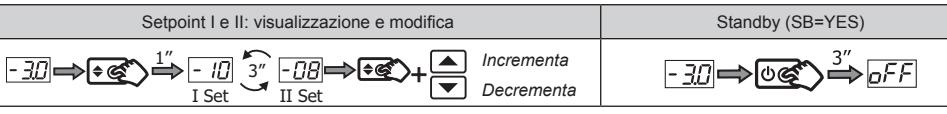

3.1 SELEZIONE SECONDO GRUPPO DI PARAMETRI

Manuale (IISM=MAN)	Automatico (IISM=ECO)	Contatto (IISM=DI)
3"	ECO (Vedi Fig. 3)	DxA=CLS DxA=OPN

3.2 AVVIO SBRINAMENTO

Manuale	Temporizzato (DFM=TIM)	Ottimizzato (DFM=FRO)	Remoto (DxO=RDS)
2''	ogni DFT ore	$T_2 < 0^\circ C$ per DFT ore	DxA=CLS DxA=OPN
Sincronizzato (D3O=DSY)			

Inizio e fine sono sincronizzati tra i BD1-28 collegati come in figura


3.3 TERMINE SBRINAMENTO

A tempo	Monitoraggio di 1 evaporatore	Monitoraggio di 2 evaporatori
DTO minuti	T_0 minuti $T_2 \geq DLI$	T_0 minuti $T_2 \text{ e } T_3 \geq DLI$

Ristabilimento ciclo termostatico. Terminato lo sbrinamento, se DRN è maggiore di 0, tutte le uscite rimarranno spente per DRN minuti, per consentire una completa fusione del ghiaccio e lo smaltimento dell'acqua formatisi. Inoltre, qualora la sonda T2 sia attiva ($T_2=\text{YES}$), le ventole ripartiranno quando l'evaporatore avrà una temperatura inferiore a FDD; se però la sonda T2 non è attiva ($T_2=\text{NO}$), dopo la conclusione dello sbrinamento, tale condizione non si verifica entro il tempo FTO, trascorsi FTO minuti le ventole vengono comunque riavviate.

Attenzione: se DFM=NON o C-H=HEA tutte le funzioni di sbrinamento sono inibite; se DFT=0 vengono escluse le funzioni di sbrinamento automatico; durante un allarme di Alta Pressione lo sbrinamento è sospeso; durante uno sbrinamento l'allarme d'alta temperatura è sospenso.

4. PARAMETRI DI CONFIGURAZIONE

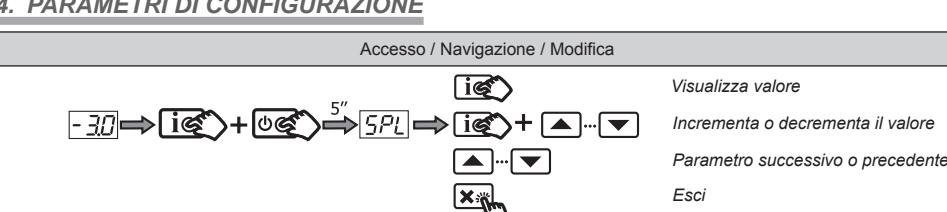

PAR	RANGE	DESCRIZIONE
SPL	-50...SPH	Limite minimo per la regolazione di SP.
SPH	SPL...110°	Limite massimo per la regolazione di SP.
SP	SPL...SPH	Temperatura di comutazione (valore che si desidera mantenere nella cella).
C-H	REF; HEA	Modo di regolazione refrigerazione (REF) o riscaldamento (HEA).
HY0	1...10°	Differenziale OFF -> ON del termostato.
HY1	0...10°	Differenziale ON -> OFF del termostato.
CRT	0...30min	Tempo di fermata del compressore. La riaccensione dell'uscita avviene solo se sono trascorsi CRT minuti dal precedente spegnimento. Consigliamo CRT=03 con HYS<2.0°.
CT1	0...30min	Tempo di attivazione dell'uscita termostato/resistenza durante un'anomalia della sonda T1. Con CT1=0 l'uscita sarà sempre OFF.

CT2	0...30min	Tempo di fermata dell'uscita termostato/resistenza durante un'anomalia della sonda T1. Con CT2=0 e CT1=0 l'uscita sarà sempre ON. Esempio: CT1=4, CT2= 6: in caso di rottura della sonda T1 il compressore funziona con cicli di 4 minuti ON e 6 minuti OFF.
-----	-----------	--

DFM	NON; TIM; FRO	Modalità di avvio di un ciclo di sbrinamento NON : la funzione di sbrinamento viene disabilitata (il parametro successivo sarà FCM). TIM : il timer viene incrementato solo quando sull'evaporatore si verificano le condizioni per la formazione di brina (incremento ottimizzato). Se l'evaporatore lavora intorno a 0°C, la frequenza di sbrinamento dipenderà dal carico termico e dalle condizioni climatiche. Con setpoint molto inferiore a 0°C, la frequenza dipenderà principalmente dal periodo di funzionamento del frigorifero.
-----	---------------	---

DFT	0...99 ore	Intervallo tra sbrinamenti. Quando questo tempo è trascorso dall'ultimo sbrinamento, inizia un nuovo ciclo di sbrinamento. Per esempio, con DFM=TIM e DFT=06, ci sarà uno sbrinamento ogni 6 ore.
-----	------------	---

DFB	NO/YES	Memorizzazione del tempo accumulato dal timer di sbrinamento. Con DFB=YES, dopo un'interruzione dell'alimentazione (blackout) il timer riparte dal valore raggiunto al momento dello spegnimento ± 30 min. Con DFB=NO, dopo un'interruzione dell'alimentazione, il timer riparte da zero.
-----	--------	---

DLI	-50...110°	Temperatura di fine sbrinamento.
-----	------------	----------------------------------

DTO	1...120 min	Durata massima dello sbrinamento.
-----	-------------	-----------------------------------

DTY	OFF; ELE; GAS	Tipo di sbrinamento. OFF: sbrinamento a ferma (Compressore e Resistenza OFF). ELE: sbrinamento elettrico (Compressore OFF e Resistenza ON). GAS: sbrinamento a gas caldo (Compressore e Resistenza ON).
-----	---------------	--

DSO	OFF; LO; HI	Sincronizzazione inizio sbrinamento - ciclo termostatico. OFF : nessuna. Lo sbrinamento avverrà senza ritardi. LO : l'avvio dello sbrinamento verrà spostato allo spegnimento del compressore (SOD=ritardo max.). HI : l'avvio dello sbrinamento verrà spostato all'accensione del compressore (SOD=ritardo min.).
-----	-------------	---

SOD	0...30 min	Tempo di attesa per la sincronizzazione tra l'avvio dello sbrinamento ed il ciclo termostatico. Se 0, lo sbrinamento partira senza ritardi.
-----	------------	---

DPD	0...240 sec	Pump down dell'evaporatore. All'inizio dello sbrinamento, le uscite di sbrinamento (definite con DTY) sono spente per DPD secondi.
-----	-------------	--

DRN	0...30 min	Pausa dopo uno sbrinamento (sgocciolamento dell'evaporatore).
-----	------------	---

DDM	RT; LT; SP; DEF	Display durante lo sbrinamento. RT: temperatura reale; LT : ultima temperatura prima dello sbrinamento; SP : setpoint attuale; DEF : "dEF".
-----	-----------------	---

DDY	0...60 min	Ritardo nella visualizzazione. Durante lo sbrinamento e per DDY minuti dopo il termine di questa fase, il display mostra l'informazione selezionata col parametro DDM.
-----	------------	--

FID	NO/YES</td